



For product and consumer services questions contact:

Oster Consumer Service
Mainland China: 4008-622-268
www.oster.com.cn

© 2014 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Distributed by Dongguan Huixun Electrical Products Co. Ltd., No. 30-32, Hu Jing Road, Hong Ye Industrial Estate, Tangxia Town, Dongguan, Guangdong Province, PRC. 1-Year Limited Warranty - please see separate insert for details. Sunbeam Products, Inc. and Dongguan Huixun Electrical Products Co. Ltd. are subsidiaries of Jarden Corporation (NYSE: JAH).

版权所有。一年有限保修：详情请参阅另附保修卡。

有关产品及客户服务问题，请联络：

Oster客户服务
国内专线：4008-622-268
www.oster.com.cn

P.N. 9100180000701
BLSTBB-073_14ECM1
GCDS-OST35547-SL

Printed in China 中国印刷



User Manual

用户手册

Blender

搅拌机



READ AND SAVE ALL
INSTRUCTIONS BEFORE USING
THIS APPLIANCE
使用产品前先阅读此用户手册
并妥善保管
www.oster.com.cn

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USE

- Check if the voltage indicated on the appliance corresponding to the local mains voltage before you connect the appliance. For Mainland China, standard electrical outlet is 220V~50Hz.
- To disconnect, grasp plug and unplug cord from electrical outlet.
- To protect against risk of electrical shock, do not immerse the cord, plug or motor base in water or any other liquids.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Never leave appliance unattended when in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Close supervision is necessary when used by or near children.
- Avoid contact with moving parts. Keep hands and utensils out of bottle while blending to prevent personal injury or damage to the blender.
- The blade is sharp. Handle with care.
- To reduce the risk of injury, never place cutter-assembly blades on base without bottle properly attached.
- Do not attempt to bypass the interlock system that powers the unit on.
- Do not blend hot liquids in the blender.

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. To avoid any hazards, call the Consumer Service number as listed on the back of this user manual, and return the appliance to the nearest Authorized Service Center for examination, repair or electrical mechanical adjustment.
- Do not use outdoors or for commercial purposes; this appliance is for household use only.
- Always operate on a flat surface.
- Unplug the blender when not in use, before taking off or putting on parts and before cleaning.
- Use this appliance for its intended use as described in this manual. The use of attachments not made by the manufacturer, including canning or ordinary jar and processing assembly parts, is not recommended by Sunbeam Products, Inc. and may cause a risk to persons.


NOTE: This blender is for household use only and please suspend one minute for every three minutes of continuous operation.

**THIS PRODUCT IS FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**

Welcome

Congratulations on your purchase of an Oster® Blender!
To learn more about Oster® products, please visit us at www.oster.com.cn.

Features of Oster® blender

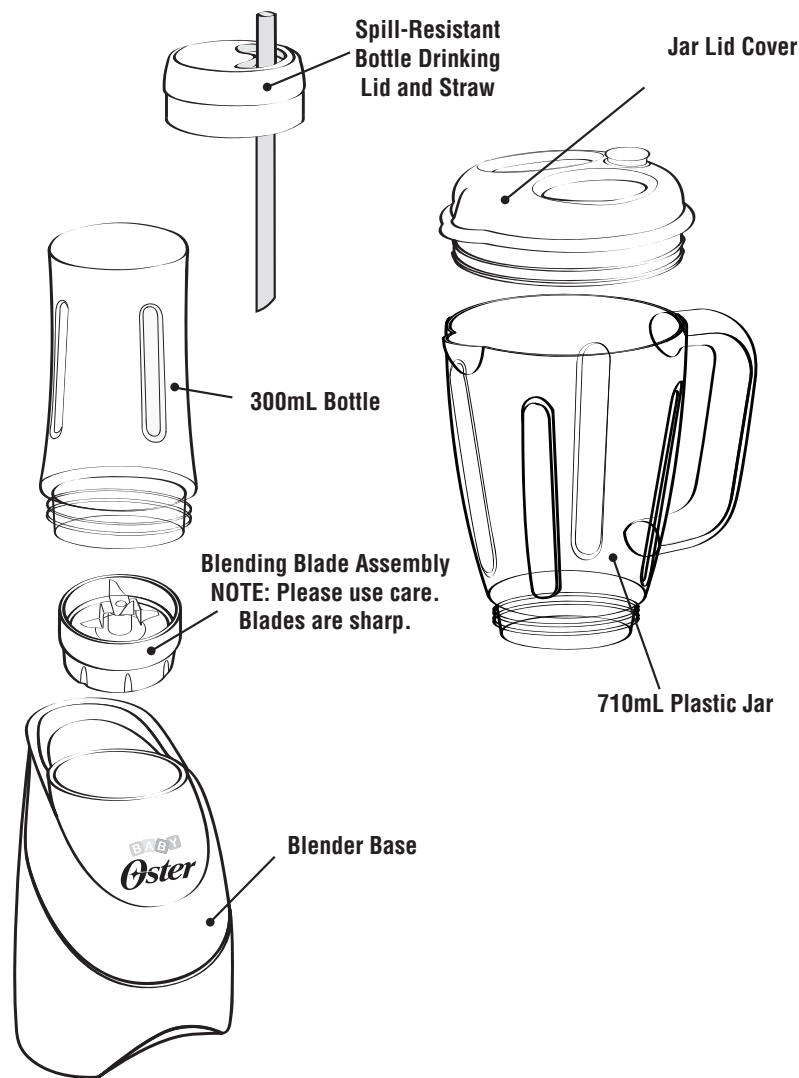


Using Your Oster® blender

Wash before first use, disassemble before cleaning. Clean blender according to the instructions in the “Cleaning and Storing Your Blender” section. Your Oster® Blender comes with a Jar (710mL) and a bottle (300mL) to optimize different capacity usage. Both containers can fit with the same blade assembly and can work with the same blender base.

To blend with the small bottle:

1

Place the bottle on a flat surface with the open end facing up. Fill the bottle with your favorite ingredients. Be sure not to fill ingredients past the 300mL marking.

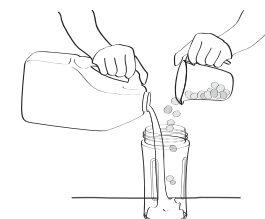

2

Fasten the blade assembly on the open end of the bottle.

Turn the bottle upside down, line up arrows on the blade assembly to the arrows on the base, and place the bottle in the base.

With one simple touch blending begins by pressing the bottle down in the base. To lock the bottle in the base for hands-free operation, simply turn the bottle clockwise in the base in the direction of I. Blending will stop once you either stop pressing the bottle into the base or once you unlock the bottle by turning in the direction of O and remove the bottle from the base.



3

Turn the bottle over and place on a flat surface. Replace the blade assembly with the drinking lid and straw. Take the bottle with your child to enjoy your blended beverage!



4

The drinking lid is spill resistant when closed. Turn the top of the drinking lid clockwise until the straw folds down into the lid. To resume drinking, turn the lid counterclockwise until the straw pops up out of the lid.

CAUTION: Always supervise children when eating/drinking. To avoid injury, do not allow a child to walk or run with a lid opened. Do not microwave.

WARNING: To prevent possible choking hazard, check straw for damage before each use by pulling on the straw. Discontinue use if straw becomes torn or cracked. Prolonged periods of time drinking liquids, other than water, may cause tooth decay.

NOTE: This small bottle is intended for children aged over 18 months.

TIP: After consuming your blended beverage, wash out the bottle and reuse it throughout the day for water or other cold liquids.

To blend with the jar:

1


Fasten the blade assembly on the small opening of the jar. Place the jar on a flat surface, with the large opening facing up.



2

Fill the jar with your favorite ingredients. Be sure not to fill ingredients past the 710mL marking.


CAUTION: Do not blend hot liquids in the blender.

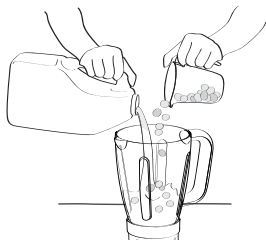

3

Attach the lid cover to the top of the jar. Line up arrows on the blade assembly to the arrows on the base, and place the jar in the base. With one simple touch blending begins by pressing the jar down in the base. To lock the jar in the base for hands-free operation, simply turn the jar clockwise in the base in the direction of **I**. Blending will stop once you either stop pressing the jar into the base or once you unlock the jar by turning in the direction of **O** and remove the jar from the base.

CAUTION: Operate only with the lid cover in place.

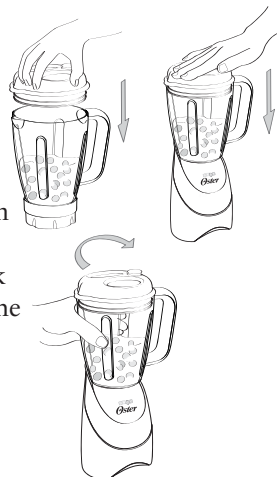

4

Remove the jar from the base and place on a flat surface. Take off the lid cover and pour the blended food into a bowl to serve or into a storage container for convenient storage in the refrigerator or freezer.



Blending Tips

Note: For optimal performance, place desired ingredients in the containers according to the following order: Liquids, fresh ingredients, frozen fruit, yogurt and ice cream.

- Put liquids in first, unless a recipe says otherwise.
- Cut all firm fruits and vegetables into pieces no larger than $\frac{3}{4}$ inch (1.8 cm) to 1 inch (2.5 cm).
- Don't overload the containers. If the motor stalls, turn the blender off immediately, unplug the unit and let it cool for at least 15 minutes. Then, remove a portion of the food and continue.
- This blender will not mash potatoes, whip egg whites or substitute dairy toppings, mix stiff dough or grind raw meat.

Cleaning and Storing Your Blender

IMPORTANT: UNPLUG BEFORE CLEANING. DO NOT IMMERSE THE BLENDER BASE IN WATER OR ANY OTHER LIQUID. Use a damp, soft sponge with mild detergent to clean the outside of the blender base. All parts except for the blender base are dishwasher-safe (top rack). You can also wash the parts, except the blender base, in warm, soapy water. Rinse well and dry.

Storing Your Blender

After cleaning, reassemble blade assembly to small open end of the jar and then place in the blender base. Snap the lid cover on top of the jar. Store the small bottle with the drinking lid and straw.

重要安全注意事项

在使用搅拌机时，请遵守以下基本的安全注意事项：

⚠ 使用前，请仔细阅读所有说明

- 在接通电源前，请检查搅拌器上标明的电压是否与当地供电电压相符。在中国大陆，标准插座输出的电源为220V~50Hz。
- 断开电源连接前，请先抓住插头，然后将插头从电源插座中拔出。
- 为防止电击风险，请勿将电线、插头或电机底座浸入水或其他液体之中。
- 请勿让电线悬挂在桌子或柜台边缘，也不要让电线与高温表面接触。
- 使用时，请勿将搅拌器置于无人照看的情况。
- 本产品不适合那些体能差、敏感度或智力较弱者，或者缺乏使用经验和不了解本产品的人士（包括小孩）使用，除非已有负责安全的人员监管他们或者告知他们本产品的正确使用方法。需对小孩进行监管，确保他们不要玩弄本产品。
- 当小孩使用本产品，或者在小孩附近使用本产品时，必须进行严密监管。
- 请勿与移动部件接触。在搅拌器进行搅拌时，请勿将手或用具放入瓶子中，以免造成人身伤害或损坏搅拌器。
- 搅拌器内刀片锋利，请务必小心处理。
- 为降低受伤风险，请勿在瓶子还没有完全扣上时将刀片组件置于底座。
- 请勿尝试绕过开通搅拌器电源的联锁系统。
- 请勿用搅拌器搅拌热液体。
- 当电源线或插头破损时，或在搅拌器发生故障或任何损坏后，切勿进行任何操作。为避免危险，请联络印于本手册背面的客户服务热线，并必须由制造商或其指定售后服务中心的专门人员来更换。
- 请勿将搅拌器用于户外或商业目的，本搅拌器仅供家庭使用。
- 请在水平面上使用本搅拌器。
- 在不使用本搅拌器时，或在拆卸或安装部件或清洁前，请先将插头从插座上拔出。
- 请按照本手册中所述，将本产品用于预期用途。本公司不推荐使用那些非授权厂家生产的附件，这包括罐子、或普通容器和加工组件，因为使用上述附件可能会导致危险或人身伤害。

提示：此搅拌器仅适合居家使用，请在每三分钟的连续操作后间断停顿一分钟让机身冷却。

本产品仅适合居家使用

⚠ 请保存这些说明

8 | www.oster.com.cn

欢迎使用Oster®随身搅拌机！

感谢你购买Oster®随身搅拌机！要了解关于Oster®产品的信息资料，请参考我们的网站：www.oster.com.cn。

Oster® 随身搅拌机



www.oster.com.cn | 9

使用Oster®随身搅拌器

在使用本产品之前,请拆下组件清洗。请按照“搅拌器的清洁与存储”部分的指示清洁搅拌器。

Oster®搅拌器配有一只300毫升的瓶子和一只710毫升的搅拌杯,用于优化不同的使用容量。这两只容器可以搭配相同的刀片组件,而且还可以使用相同的搅拌器底座。

用小瓶子搅拌:

1

请把瓶子放在水平面上,把开口端朝上。

然后,把你最喜欢的食材放入瓶子。

请确保放入的食材不要超过瓶子上300毫升的标准线。



2

请把刀片组件固定在瓶子开口端上。把瓶子倒转过来,请把刀片组件的箭头和底座上的箭头对齐,然后把瓶子放入底座。

只要轻轻把瓶子向下按入底座,搅拌器即可开始工作。

为进行自动操作,你可简单地把瓶子顺时针旋转至“I”的位置,并把它锁定在底座。一旦你停止把瓶子按入底座,或把瓶子旋转至“O”的位置并把瓶子从底座释放,搅拌工作就会停止。



3

把瓶子翻转过来,然后放置在水平面上。这时,请把刀片组件更换成饮用盖连吸管。你可把瓶子带在小孩身边,以便随时饮用。



4

饮用盖有防溢设计,把饮用盖盖面顺时针旋转直至吸管折叠并收在饮用盖内。要再饮用前先把饮用盖盖面反时针旋转至吸管弹出。

注意:当小孩饮用或进食时,必须进行严密监管。为防止受伤,请勿让小孩拿着载有液体并开口的瓶子走动。勿将瓶子放在微波炉中。

警告:为防止可能造成哽塞危险,在每次使用前请拉出并检查吸管是否损坏。如果吸管出现撕裂或破裂,请停止使用。长时间饮用清水以外的饮品,可能会导致蛀牙。

提示:小瓶子仅适合18个月或以上的小孩使用。

提示:在喝完搅拌饮料后,请把瓶子清洗干净,便可用来盛装水或其它冷饮。

用搅拌杯搅拌:

1

请把刀片组件安装在搅拌杯小的开口端上。把搅拌杯放在水平面上,把大的开口端朝上。



2

然后,把你最喜欢的食材放入瓶子。请确保放入的食材不要超过瓶子上710毫升的标准线。


注意:请勿用搅拌器搅拌热液体。



3

盖上搅拌杯盖子,把刀片组件的箭头和底座上的箭头对齐,然后把搅拌杯放入底座。为进行自动操作,你可简单地把搅拌杯顺时针旋转至“I”的位置,并把它锁定在底座。一旦你停止把搅拌杯按入底座,或把搅拌杯旋转至“O”的位置并把搅拌杯从底座释放,搅拌工作就会停止。

注意:操作搅拌器之前,请将盖子盖到搅拌杯上。

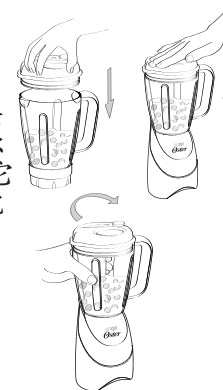

4

把搅拌杯从底座拿出,然后放置在水平面上。打开搅拌杯盖子,并把已搅拌的食物倒出,放入碗里进食或装入储存容器内并进行冷藏或冷冻。



搅拌提示

备注: 为获得最佳性能, 请按照下述顺序将所需的食材放入搅拌容器中: 液体、新鲜食材、冷冻水果、酸奶和冰淇淋。

- 除非食谱另有说明, 请首先把液体放入容器里。
- 请把所有坚实水果和蔬菜切成片状, 尺寸不大于 $\frac{3}{4}$ 英寸 (1.8厘米) 至1英寸 (2.5厘米)。
- 请勿放入太多的食材使容器超负荷。如果电机停止转动, 请立即关闭搅拌器, 拔掉设备电源, 让它冷却至少15分钟。然后, 在取出食品后继续操作。
- 此搅拌器不可用来搅土豆泥、搅拌蛋白或代替乳制品配料, 也不可搅拌稠厚面团或绞肉。

搅拌器的清洁与存储

重要提示: 在清洁搅拌器前, 请先拔掉电源。请勿把搅拌器底座浸入水或其他液体中。

请使用沾有柔性清洁剂的潮湿软性海绵清洁搅拌器底座外面。除搅拌器底座外, 所有部件都可以安全放心地用洗碗机顶架进行清洗。你也可以用温肥皂水清洗上述部件, 但不包括搅拌器底座在内, 冲洗后请彻底擦干。

搅拌器清洗好后应晾干。

搅拌器的存储

在搅拌器清洁后, 请把刀片组件重新装到搅拌杯的小开口端上, 然后把它插入搅拌器底座。请把盖子合在搅拌杯的瓶子上端。将小瓶子与饮用盖子连吸管一起存放。